



Parts Reference Guide
3845-01

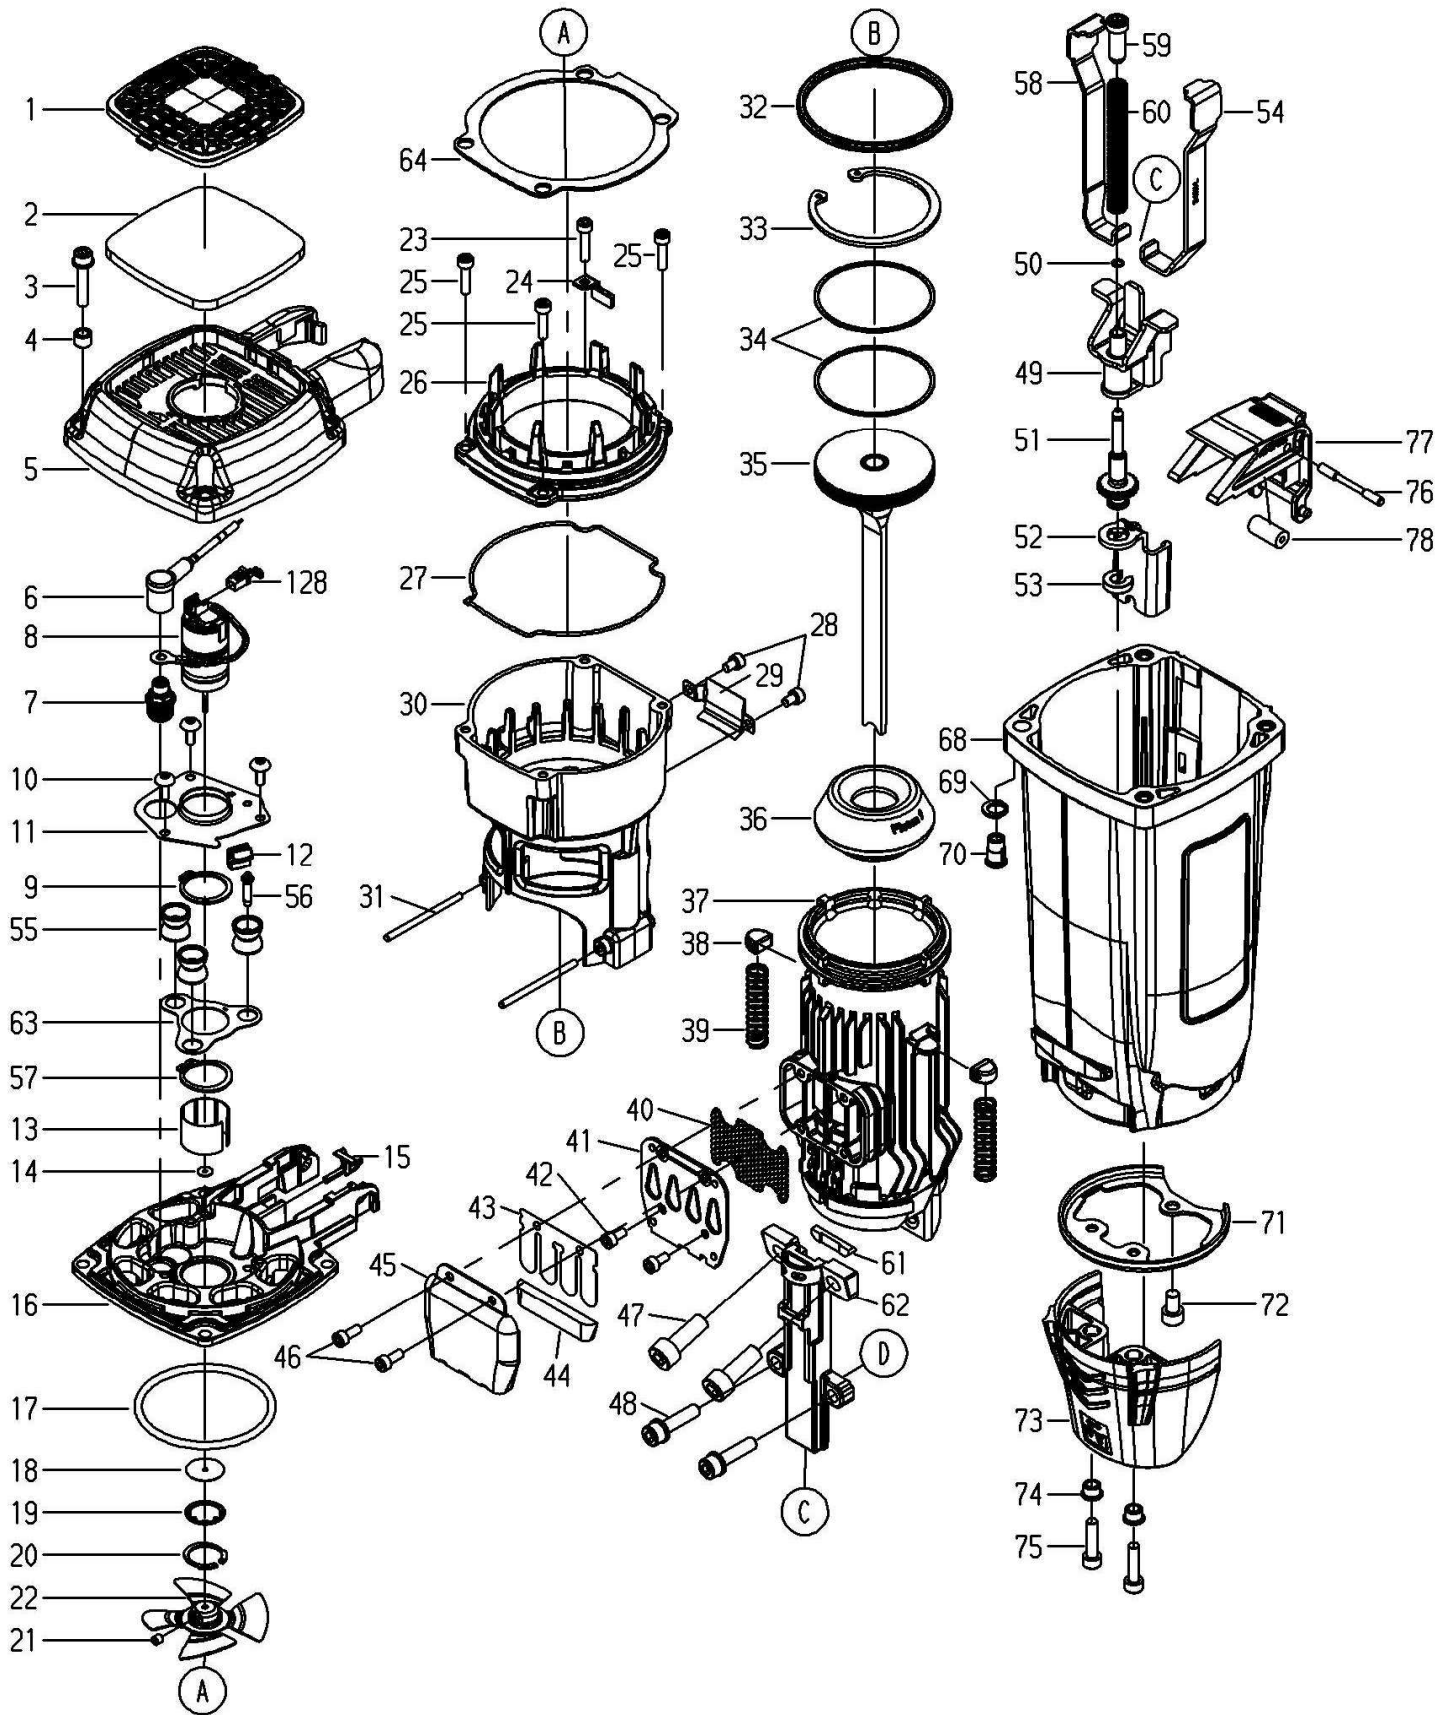

1	Luftfilterabdeckung Air filter cover Couvercle du filtre à air Tapa del filtro de aire	14512714	18	Dichtung Seal Douille Junta obturadora	14512609 14509757	50	Sicherungsmutter Safety nut Ecrou de sûreté Tornillo de seguridad	14512630 14512648 13303533 14509426	86	Kabelführung Cable guide Gestion des câbles Gestión de cables	14513976
2	Luftfilter Air filter filtre à air Filtro de aire	14509755	19	Motordichtung Motor, gasket Joint d'étanchéité moteur Juego juntas motor	14512610	51	Bolzen Bolt Boulon Bulon	14512694 14512734	87	Zuendrafra Ignicion coil Bougie d'allumage Bobina de ignicion	14512695
3	Zylinderschraube Allan screw Vis cylindrique Tornillo allen	14509995 14512613 14512697 14512698	21	Gewindestift Grub screw Douille fendue Tornillo de presión	14512612	52	Auslösebügel Safety yoke Palpeur de sécurité Estribo de seguridad	14513970 14512633 14512637	88	Schalter Switch Commutateur Interruptor	14512662
46		14506882	22	Rotor Rotor Ventilateur Ventilador	14510214	53	Ring Ring Anneau rainuré Aro con tuerca	14512632	90	Batteriekontakthalter Battery contact holder Support de contact de la batterie Titular de contactos de la batería	14512578
47		14512627	24	Führungsblech Safety guide Guide Soporte guía	14512614	55	Stützring Supporting ring Bague d'appui Aro de soporte	14512634	91	Batteriekontakt Batterie contact Contact avec la batterie Batería de contacto	14512546
48		14513968	26	Brennkammer Combustion chamber Chambre de combustion cámara de combustión	14512615	56	Achse Pin Axe Eje	14512635 14512638 14512653	92	Schraube Screw Vis Tornillo	14511554
72		14512650	30	Distanzblech Distance plate Plaque intercalaire Placa distanciadora	14512617	59	Treiberführung Driver guide Guide-marteau Guía martillo	14513971 14513979	93	LED-Abdeckung LED-Cover Cache des voyants Cubierta de los LED	14512665
75		14509403	29		14512616	61		14513972	107		14512677
94		14512283	31	Stift Pin Axe Pasador	14512618 14506846 14512675	62	Kopfstück Nose housing Tête Testero	14513972	108	Federhalter Spring holder Support de ressort Muelle colgador	14512678
97		14509993	102		14512562	63	Distanzstück Spacer Guide à distance Distanciador	14512642 14512643 14512657	109	Halterung Retainer plate Fixation Barra de soporte	14513978 14513990
100		14506884	104		14513966	64	Auslöser Trigger Levier de détente Gatillo de disparo	14512727	118	Schutzblech Debris cover Capot Tapa guarda	14513985
103		14510052	34	Kolbenring Piston ring Segment de piston Aro del piston	14512621 14512623	66	Gehäuse Body Corps Cuerpo	14513973	119	Bolzen mit Kopf Pin with head Boulon avec tête Perno con cabeza	14513986
106		14509929	35	Kolben, kompl. Piston, unit Piston, complet Piston cpl	14512602 14512603	67	Zylinderhalter Cylinder sleeve holder Anneau de cylindre Soporte manguito cilindro	14513974	120	Magazin Magazine Chargeur Carga	14513981
116		14513980	36	Druckfeder Compression spring Ressort à pression Muelle de presión	14510217 14512639 14510216 14512676	71	Schutzkappe Safety cover Protecteur Tapa protectora	14512651	121	Anschlag Stop Butoir Tope	14513987
4	Scheibe Washer Rondelle Arandela	14512693 14512647 14512652 14512663	111		14510093	73	Wippe Release rocker Bascule de déclenchement Rodillo desconexión	14513975	124	Vorschieber Pusher Chariot Empujador	14513982
69		14512647	115		14506831	77	Buchse Bushing Douille Casquillo	14512654 14513988	128	Kabelsatz Schalter Switch cable set Câble kit interrupteur Cable kit interruptor	14512672
74		14512652	122		14506804	80	Handgriff Grip Poignée Taco	14512655 14512666 14512737	129	Isolierhülse Insulating sleeve Manchon isolant Manguito aislante	14514139
89		14512663	125		14511411	81	Bolzen Bolt Boulon Bulon	14512656			
96		14509854	40	Lochblech Perforated plate Grille joint Placa perforada	14512624	83	Lasche Hook plate Plaquette d'ancrage Placa con ganchos	14512658 14513977			
110		14512736	41	Auspuffkammer Exhaust chamber Chambre d'échappement Cámara de escape	14512625	84	Blechschrabe Tapping screw Vis autotaraudeuse Tornillo de rosca cortante	14512659 14512660 14512671			
5	Luftfilterkappe Air filter cap Bouchon du filtre à air Tapa del filtro de aire	14512715	43	Ventilfeder Reed valve Ressor Resorte	14510215	85					
6	Zündkabel Spark plug lead Fil de bougie Cable de ignición	14513963	44	Schalldämpfer Silencer Amortisseur de bruit Silenciador	14512563	98					
7	Zündkerze Spark unit Bougie Bujía	14510211	45	Luftleitblech Exhaust cover Déflecteur Recubrimiento del escape	14512626						
8	Motor, kompl. Motor, compl. Ensemble moteur de ventilateur Conj. motor ventilador	14510212	49	Auslösesicherung Safety yoke Palpeur de sécurité Estribo de seguridad	14513969						
9	Sicherungsring Circlip Clips Aro de seguridad	14512601 14512611 14513965 14512636									
20		14512611									
33		14513965									
57		14512636									
113		14506890									
10	Linsenschraube Lens head screw Vis creuse fraisée Tornillo cabeza de la lente	14512602									
11	Positionsblech Position plate Plaque de position Colocación de la placa	14512603									
12	Kabelhalter Kable holder Support de câble Portacables	14512604									
13	Gleitlager Slide bearing Manchon Manguito	14512605									
14	Scheibe Washer Rondelle Arandela	14512606									
15	Stemaufnahme Stemadapter Adapteur, tige Adaptor vástago	14513964									
16	Zylinderkopf Cylinder head Chapeau, chambre de combustion Tapa cámara combustión	14512608									
17	O-Ring O-ring Joint torique Aro torico	14509756 14509758 14506906									

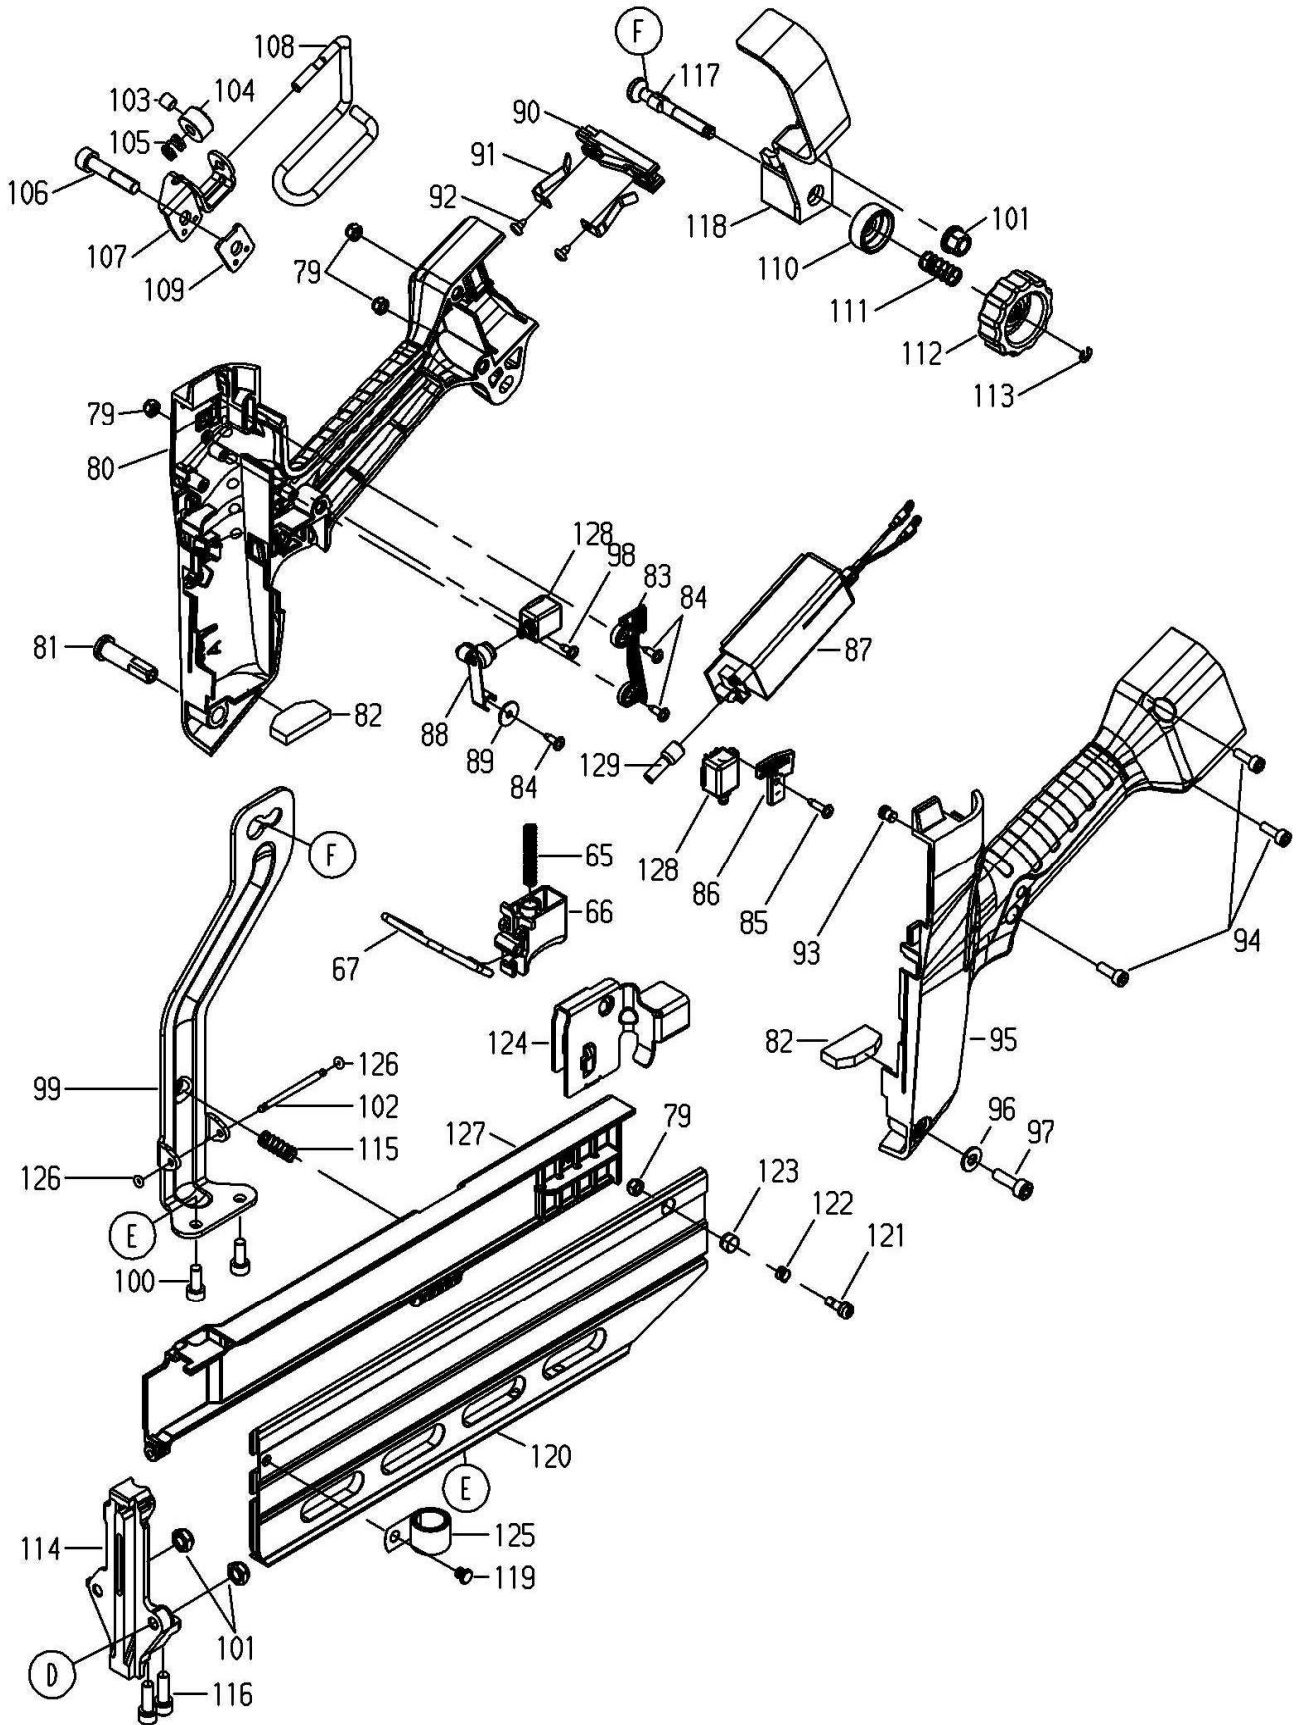



14513991

14512116

